




Technical Systems Ltd


SlimStep[®]—Operating Instructions

To DEPLOY the SlimStep

Step D1

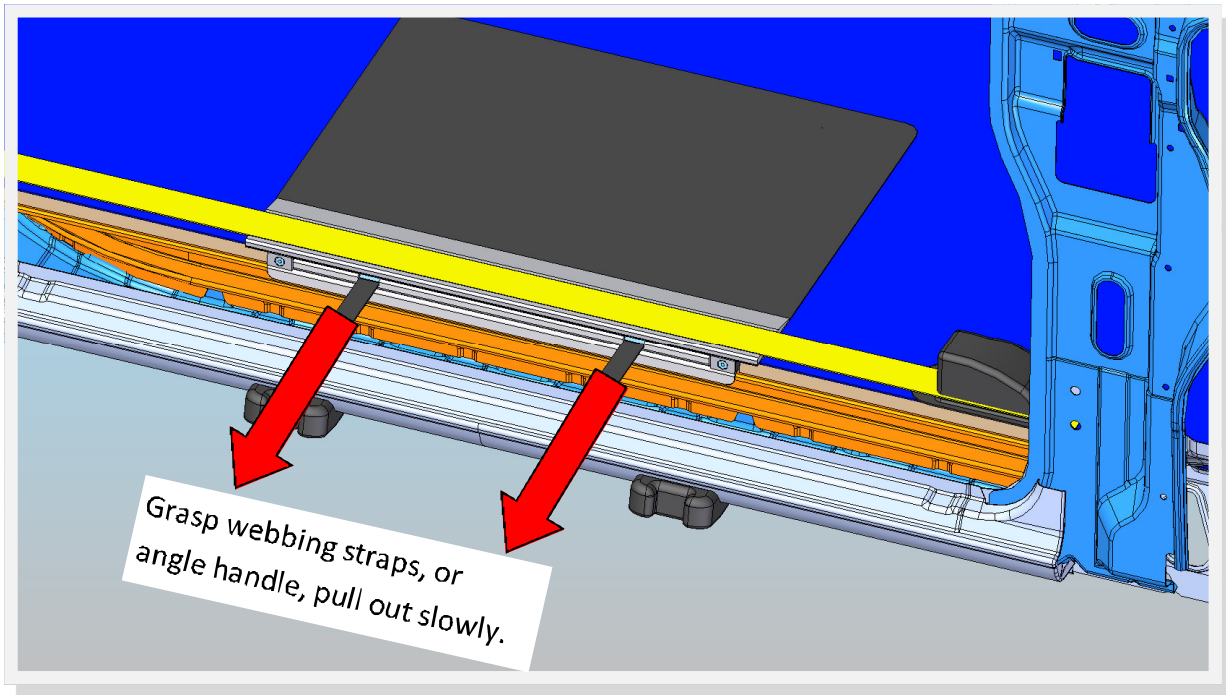


Step D2

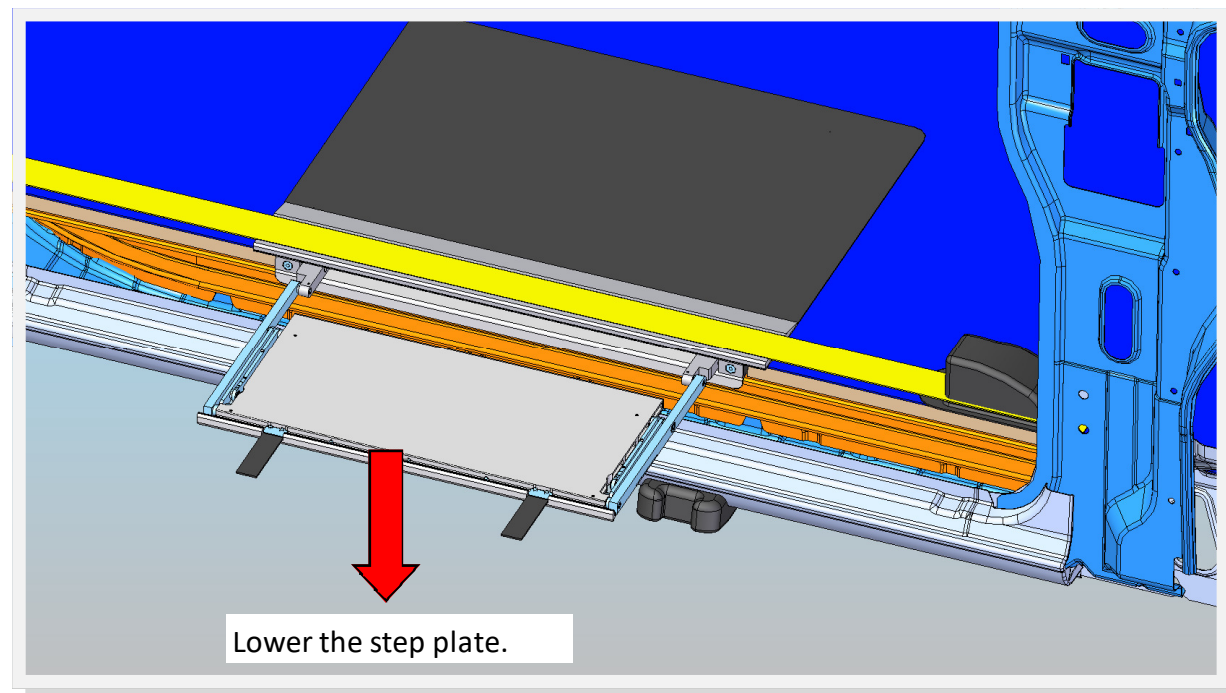


To DEPLOY the SlimStep

Step D3

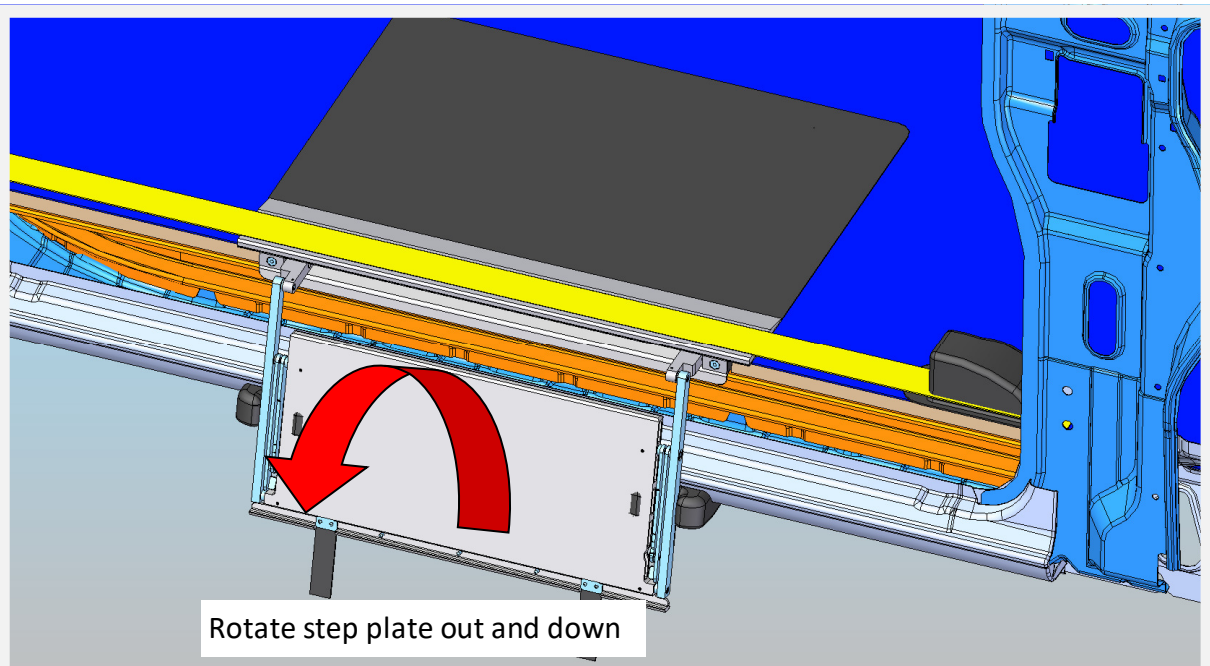


Step D4—Fully deployed

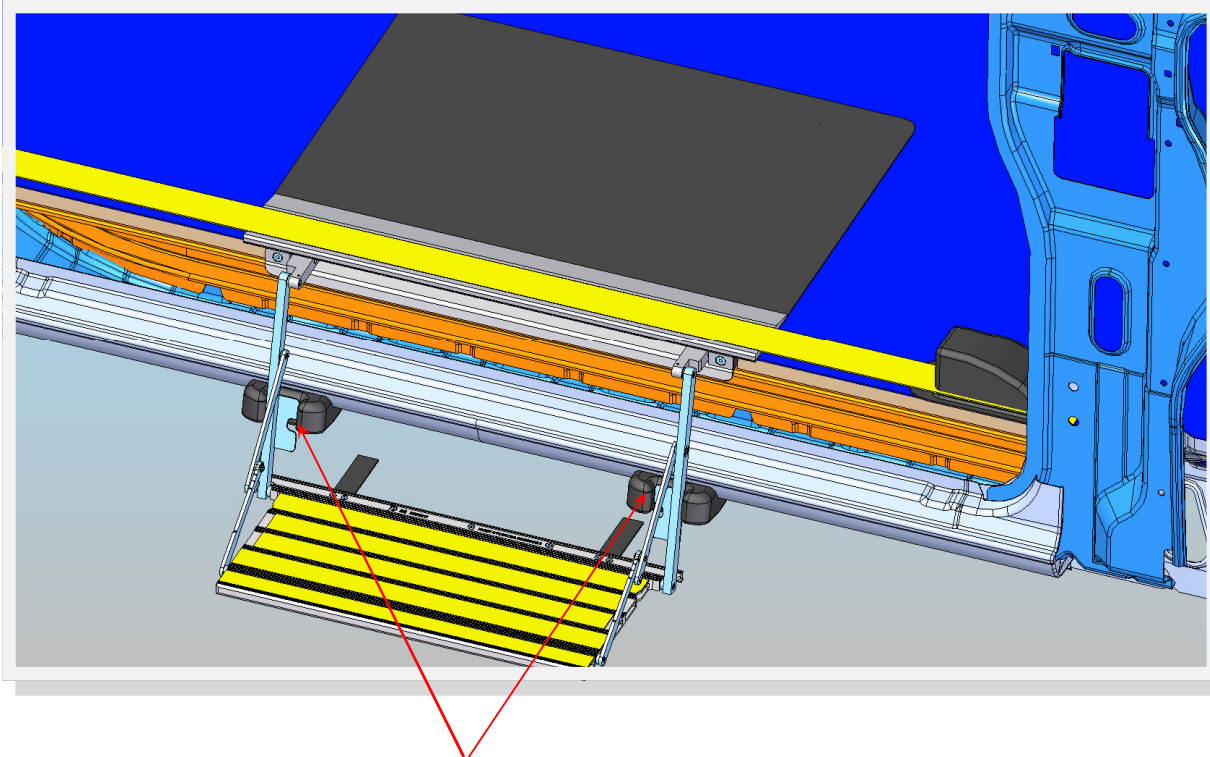


Note: The drop arm plates *MUST* locate in the black plastic Guide Blocks as shown.

To STOW the SlimStep

Step S1

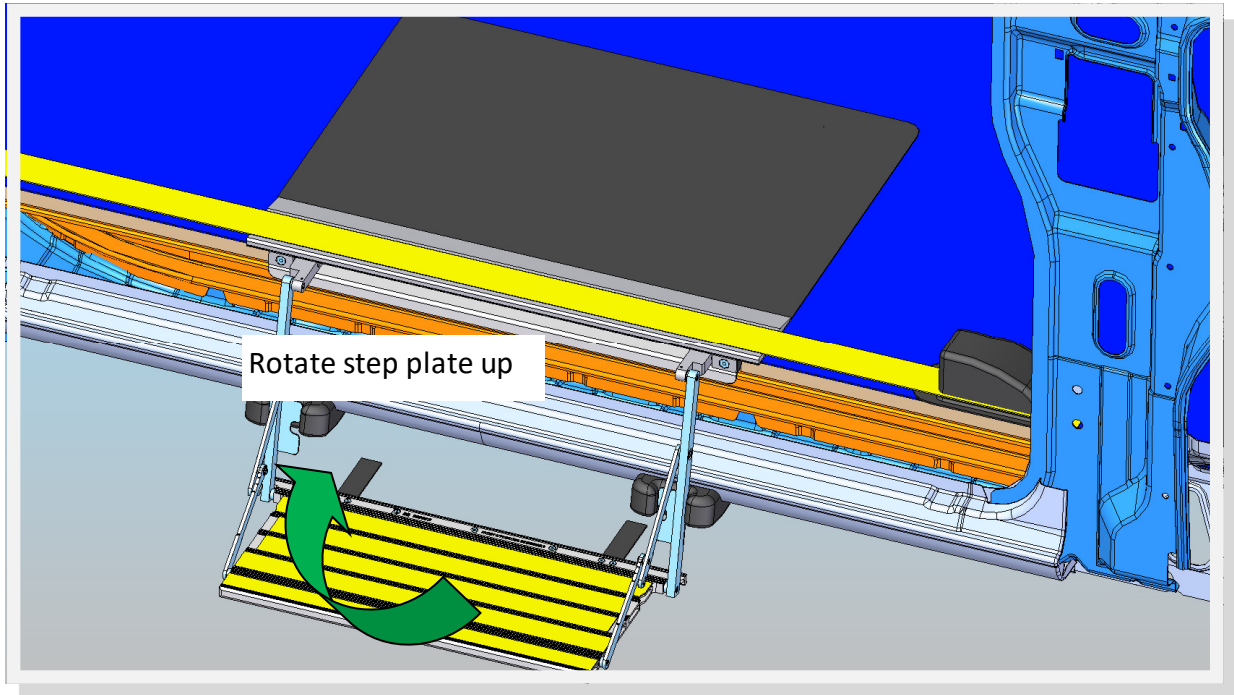


Step S2

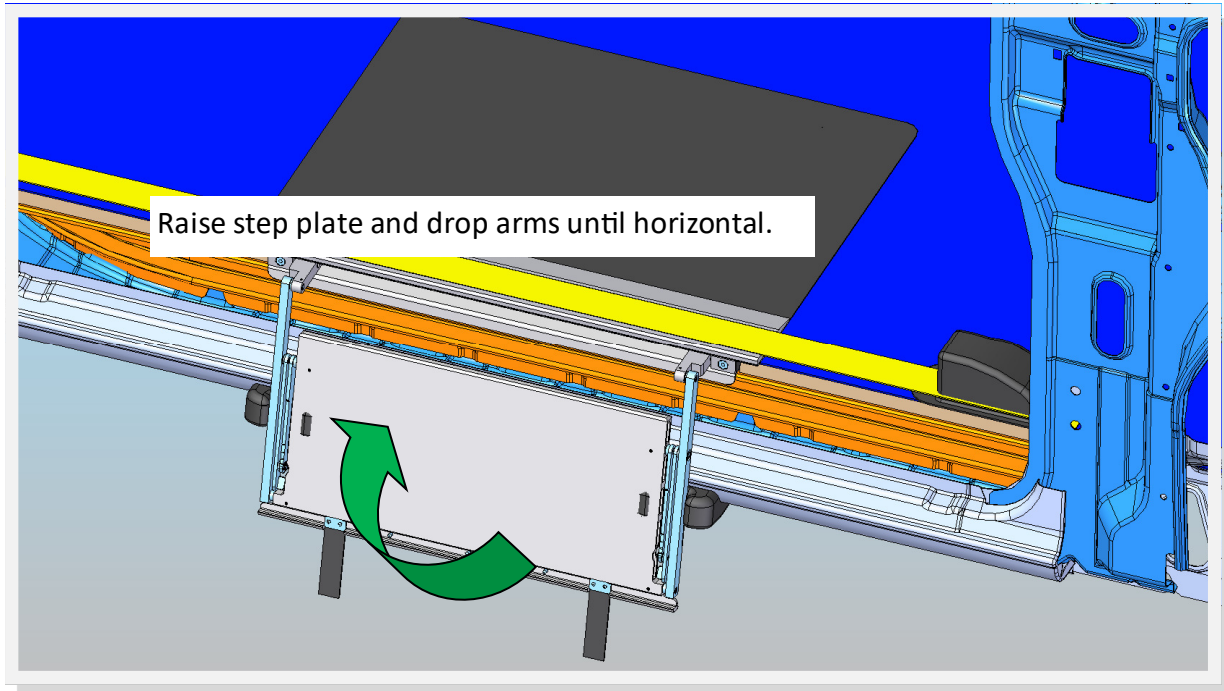


To STOW the SlimStep

Step S3

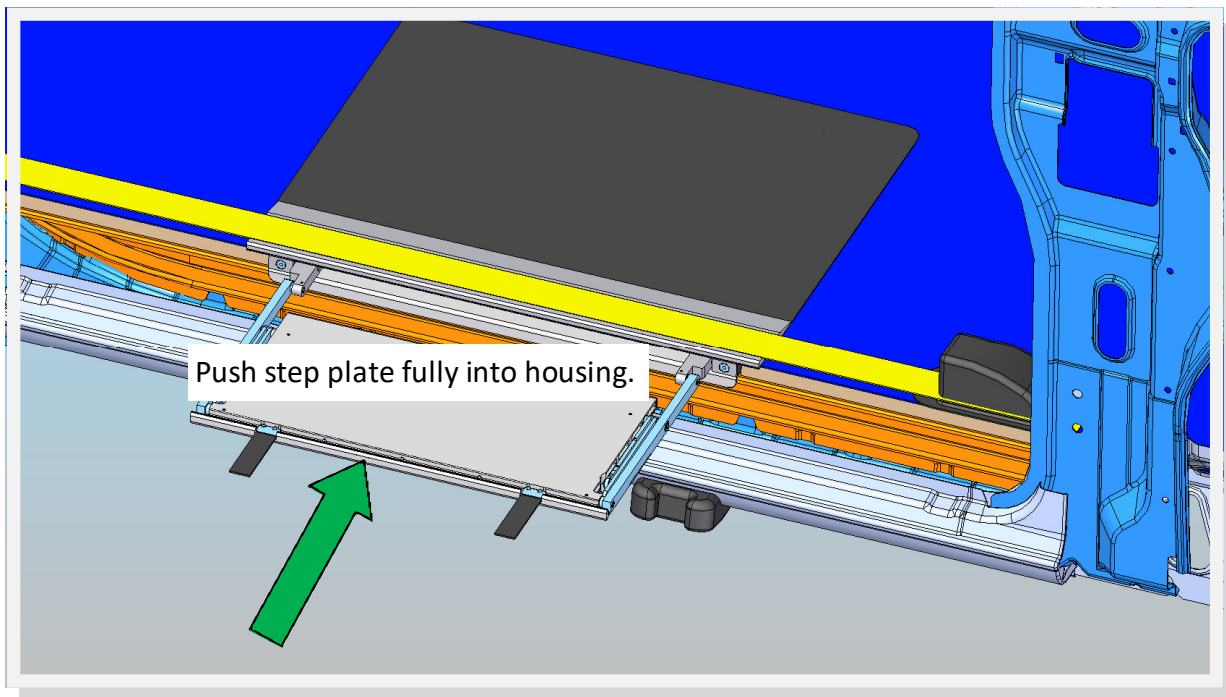

Step S4—Fully Stowed

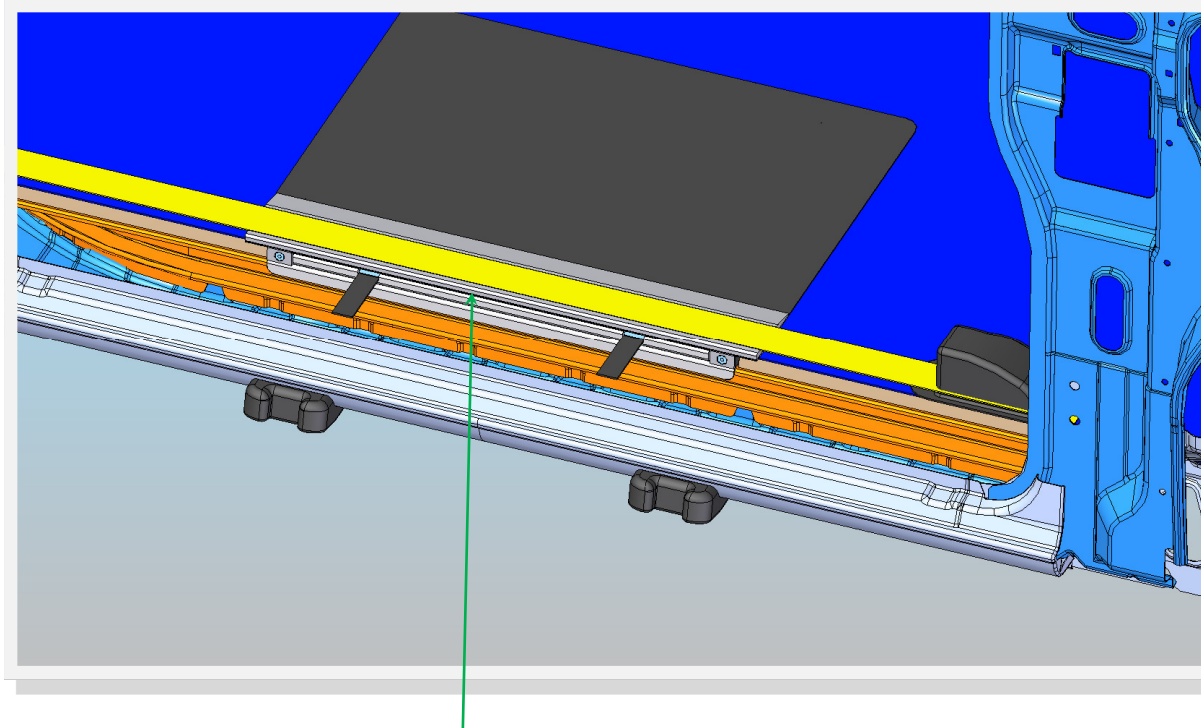

When fully stowed edge of step plate is flush with edge of housing.